



Installation Instructions ALTO Pendant Surface Mount Yoke

WARNING !

- Read all instructions before installing. Retain these instructions for future reference.
- Turn off power at main switch before installing or modifying the system.
- For installation by a qualified electrician.
- Luminaire is intended for installation in accordance with National Electric Code and local regulations. Consult with local inspector to assure compliance.
- CAUTION – RISK OF SHOCK - RISK OF FIRE
ATTENTION – RISQUE DE CHOC - RISQUE D'INCENDIE

NOTE

- SUITABLE FOR DAMP LOCATIONS
CONVENIENT AUX EMPLACEMENTS HUMIDES
- MIN 90°C SUPPLY CONDUCTORS
LES FILS D'ALIMENTATION DOIVENT CONVENIR POUR 90°C
- The canopy is designed to fit standard 3.5" and 4" round and octagonal and 4" square junction boxes [1] (supplied and installed by others).
- Surface mount and yoke fixtures are identical to pendants but do not have parts [7, 8, 9]. Instead, the fixture or the yoke is attached directly to the copy at the factory.

INSTALLATION

- Attach the mounting bracket [2] to the junction box [1] using two 8-32 screws [3].
- Insert the toggle bar [4] through the hole in the canopy L-bracket [6] to hang the fixture temporarily from the bracket.
- Adjust the length of the aircraft cable [8] and the power cord [9] as desired.
NOTE: The weight of the fixture must be fully supported by the aircraft cable [8], not the cord [9].
- Attach the strain relief [7] to the power cord [9].
- Connect the wires using approved wire connectors as follows:
 - 1) Line: Black to Black
 - 2) Neutral: White to White
 - 3) Ground: Green to Green / incoming ground wire. Bond to junction box as required.
 - 4) 0-10V Dimming Control: Violet to Violet
 - 5) 0-10V Dimming Common: Gray to Gray
- The canopy has three internal pins [5] and the mounting bracket has three hooks [10]. There is only one orientation where the pins are correctly aligned with the hooks. Align the pin [5] next to the release hole [12] so that it will mate with the hook that has the leaf spring locking mechanism [11].
- Lift the canopy and fixture up to the finished ceiling and rotate clockwise until the pins are engaged in the hooks and you hear the click of the locking mechanism.

REMOVAL

- Insert a paper clip or pin in the release hole [12] and press the internal leaf spring locking mechanism [11].
- Rotate the canopy assembly counter-clockwise while supporting the fixture's weight.

